We bring good things to life.

Color Television

Owner's Manual

Getting Started.....2-3

Controlling Your TV.....4-6

Operating Features.....7-12

Connecting Your TV.....13-16

Accessories.....17-18

Caring for Your TV.....19

Trouble Checks.....20

Limited Warranty.....21

Safety Precautions

WARNING: To prevent fire or shock hazard, do not expose this TV to rain or moisture.

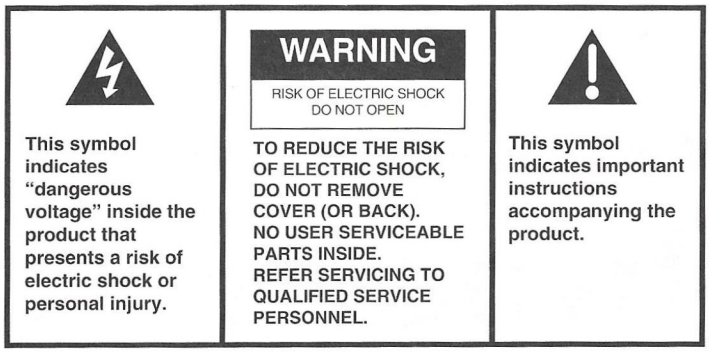
This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.
WARNING
RISK OF ELECTRIC SHOCK DO NOT OPEN
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
This symbol indicates important instructions accompanying the product.

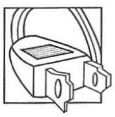

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqú au fond.

CAUTION:

Do not defeat the safety feature of this plug. The wide blade fits into the wall socket only one way. If you need an extension cord, make sure it matches the plug of the TV.

Operate TV only on 120 volts, 60 Hz AC power (normal house power).

For safety reasons, make sure any equipment or accessories connected to this product bears the UL listing mark or CSA certification mark. If in doubt, contact qualified service personnel.

FCC Regulations state unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Note to Cable TV Installer:

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed. Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you ever need them. The numbers are located on the back of the TV.

MODEL NO. _____

SERIAL NO. _____

PURCHASE DATE: _____

PURCHASED FROM: _____

_____

_____

Introduction

Thank you for choosing GE

Your television is designed for long life and superior operation. Despite its sophistication, your new TV is amazingly simple to operate because it has so many automatic features.

Table of Contents

Getting Started
First-Time Operation 2-3

Controlling Your TV
Front Panel 4
On-Screen Displays 5
Remote Operation 6

Operating Features
Closed Captioning 7
VIDEO Menu 8
SETUP Menu 9
Sleep Timer Operation 10
Alarm Timer Operation 11
Autoprogramming Channel Memory 12

Connecting Your TV
Antenna Cable Information 13
Connecting Supplied Antenna to the TV 13
Home Antenna Connections 14
Cable-TV Connections 15
Cable-TV Operation 16

Accessories
Accessories 17
Order Form 17-18

Caring for Your TV
Cleaning & Care 19

Trouble Checks 20

Limited Warranty 21

Getting Started

First-Time Operation

The steps below will help you get your TV connected and working quickly. Page numbers are also listed for more details.

1. Unpack TV and accessories.

Shown below are the accessories that came packed with your TV.

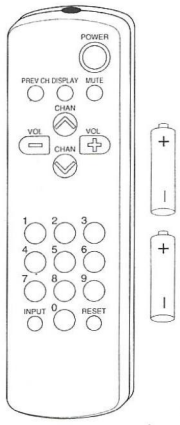

Remote Control and Two Batteries

Antenna Adapter
Replace only with stock #193983.

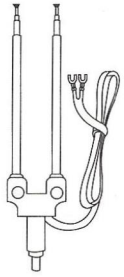

Dipole Antenna

2. Place batteries in remote.

1. Turn the remote control face down.
2. Press down on the ridged area of the battery cover and slide it off.

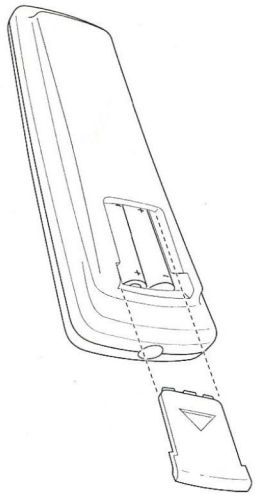

3. Place two "AAA" batteries as shown matching the + and – end of each battery in the compartment.
4. Replace the cover.

3. Connect antenna or cable-TV system.

Most antenna or cable-TV systems can be connected as shown here.

Incoming Cable from Antenna or Cable-TV System

- Details for connecting a home antenna to your TV are on *page 14*.
- Details for connecting a cable-TV system to your TV are on *pages 15-16*.

4. Plug in the TV.

Plug the cord into the outlet, matching the wide and small end of the plug with the outlet.

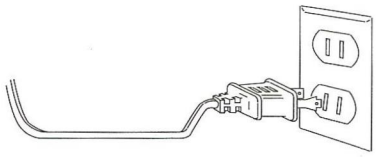

First-Time Operation

5. Turn on TV and place channels in memory.

Your TV has been designed to place active channels into your TV's memory the first time you turn it on.

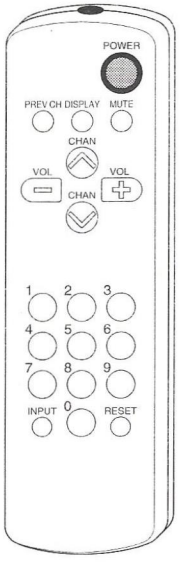

- Press the *POWER* button on the TV or the remote to turn on the TV.
- The TV will automatically cycle through all channel numbers and place active channels into the channel memory. When your TV is finished, it will tune to the lowest channel number in its channel memory.

6. Edit the channel memory.

You can add and erase channels from memory as desired by first pressing *MENU* repeatedly to highlight *SETUP*. Then press + or – to select the *SETUP* menu. Press *MENU* until *EDIT CHANNELS* is highlighted.

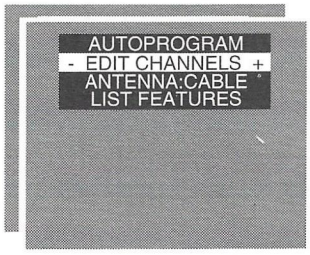

Press *MENU* repeatedly to see 2nd setup menu.

Press + to select *EDIT CHANNELS*. Select the desired channel number by pressing the *CHANNEL* up or down button or by pressing two number buttons.

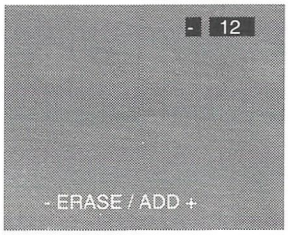

Then press + to add a channel, or press – to erase a channel. *Details are on page 12.*

7. Set the clock.

- Press *MENU* repeatedly until *SETUP* is highlighted. Press + to select the *SETUP* Menu.
- Repeatedly press the *MENU* button to select the *CLOCK* function.
- Press and hold the – button to set the correct hour. Then press and hold the + button to set the correct minutes.

Controlling Your TV

Front Panel

Shown here are the front-panel buttons.

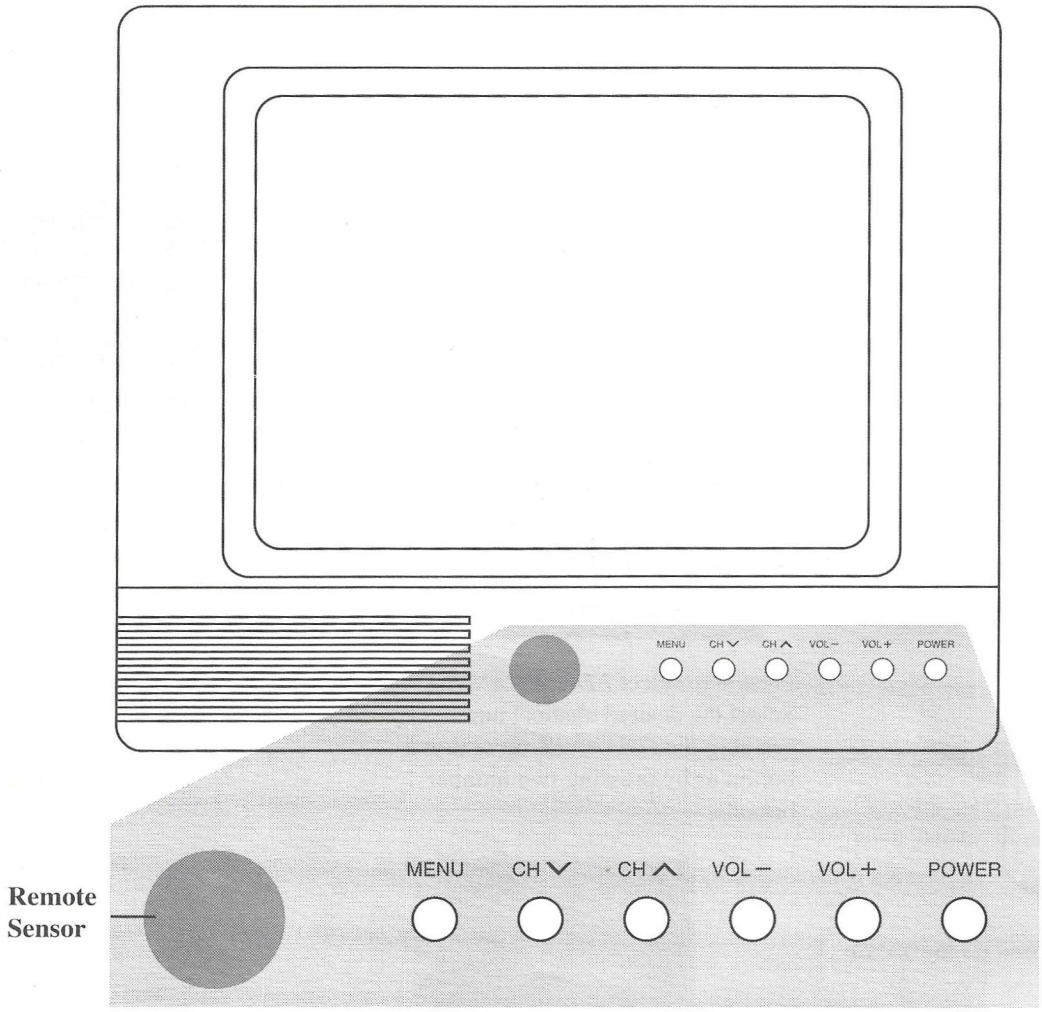

Remote Sensor

- When using the remote control, point it toward this sensor.

***MENU* Button**

- Press repeatedly until the menu you want is highlighted (either *VIDEO* or *SETUP*), then press + or – to enter the menu.
- Press repeatedly to move down each menu screen and then press + or – to adjust each setting.
- Press once and then press + to mute the TV.

***CH* (Channel) Buttons**

- Press Channel up to see the next higher channel in memory.
- Press Channel down to see the next lower channel in memory.
- You can add or erase channels in memory as desired. *Details are on page 12.*

***VOL* (Volume) Buttons (Also + and – Buttons)**

- Press *VOL* + to increase volume, or press *VOL* – to decrease volume.
- The volume display will automatically appear on the screen when you press the *VOL* buttons.
- Press + or – to adjust the setting of a highlighted item.

***POWER* Button**

- Press to turn the TV on or off.

Controlling Your TV

On-Screen Displays

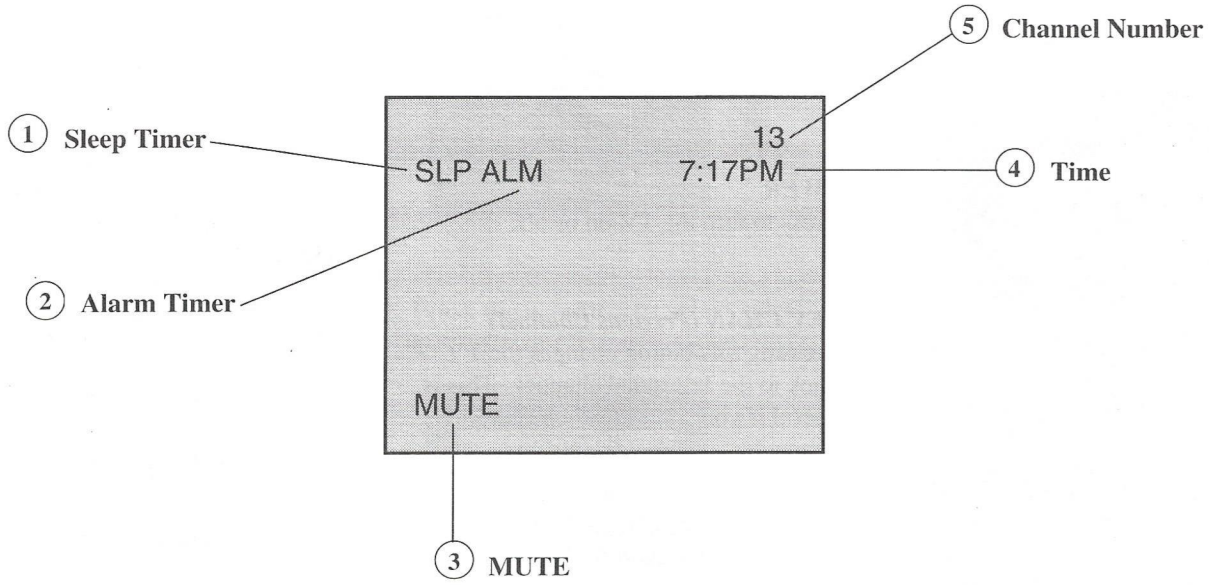

1 Sleep Timer
This display appears when the sleep timer has been set.
Details are on page 10.

2 Alarm Timer
This display appears when the alarm timer has been set.
Details are on page 11.

3 *MUTE*
This display appears when the TV's sound is muted.
Details are on page 6.

4 Time
This display appears after the clock is set whenever you change channels or press the *DISPLAY* button.

5 Channel Number
This display appears whenever you change channels or press the *DISPLAY* button.

Controlling Your TV

Remote Operation

When operating the remote, point it directly at the front of the TV without objects between that can block the signal to the TV.

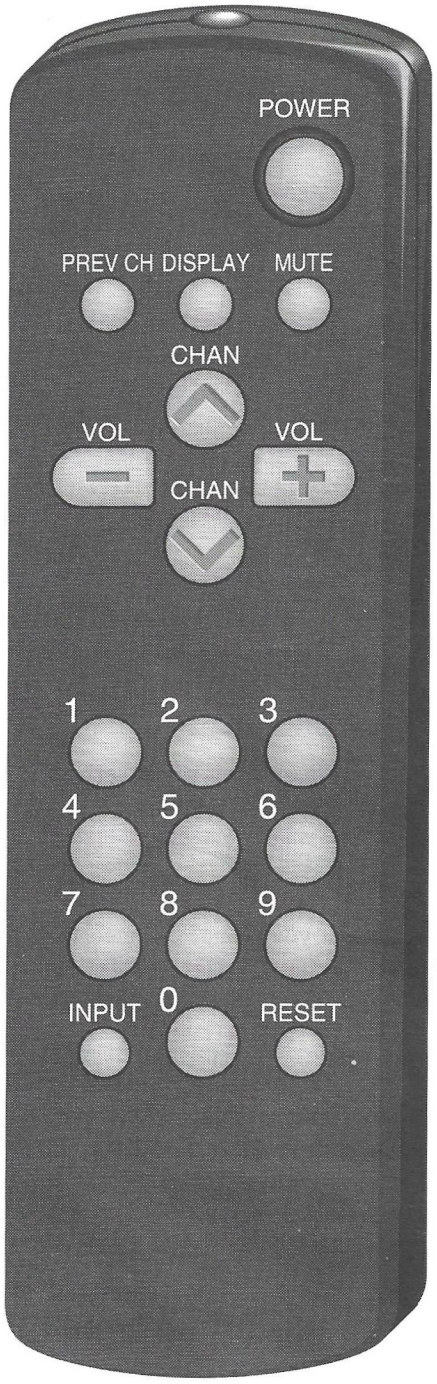

POWER
- Press to turn the TV on or off.

PREV CHAN (Previous Channel)
- Pressing this button changes the TV back to the last tuned channel. This is useful if you want to watch two channels.
- Select the first channel you wish to watch. Then select the other channel by pressing two number buttons
- The TV will now change back and forth between the two channels each time you press this button.

DISPLAY
- Press to display the time and channel number on the screen.
- Press to quickly remove menus from the screen.
- Press to see if the Sleep Timer and/or Alarm Timer is set.

MUTE
- Press to quickly reduce sound to minimum level without affecting the picture.
- To restore sound, press *MUTE* again or press *VOL* up.

CHAN Δ/∇ (Channel up and down)
- Press to select the next higher or lower channel in memory.
- You can add or erase channels in memory as desired. *Details are on page 12.*

VOL up and down (– and + Buttons)
- Press to increase or decrease volume.
- Use these buttons after you have pressed the *MENU* button to adjust a feature.

Number Buttons (0-9)
- Press to access any channel number.
- To select a channel, press two number buttons. For example, press 0 then 6 for channel 6.
- To select a 3-digit number, press and hold number button 1 until 1-- appears on the screen. Then press the other two numbers.

INPUT
- Switches the TV to channel 03. This is useful if you have a VCR connected to your TV.

RESET
- Press to return all video settings (color, tint, contrast, brightness, and sharpness) back to the original settings.

Closed Captioning

Closed captioning displays the sound of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound.

Two types of closed captioning are available. They are C1 and C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

This TV does not support the text mode. Text Mode is general information usually shown in a box on the screen with information that is not related to closed captioning.

1. Press the *MENU* button on the TV until *CAPTION* is highlighted.

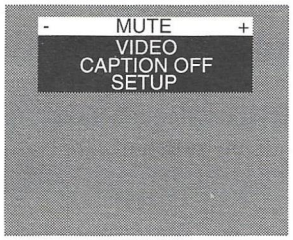

2. Press the + button to select select *OFF*, *C1*, or *C2*.

3. When finished, the display disappears from the screen in a few seconds.

VIDEO Menu

Press the *MENU* button on the TV until *VIDEO* is highlighted. Then press + to select the *VIDEO* menu. Press *MENU* to move down the menu and + and – to adjust each function.

1st *VIDEO* Menu Screen

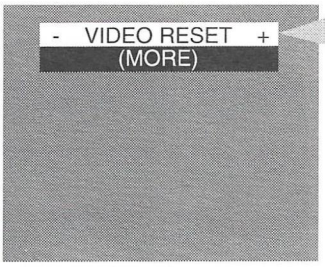

The *VIDEO RESET* function changes all the video functions (color, tint, contrast, brightness, sharpness) back to the factory settings. Press – or + to reset the video functions. *RESET* appears on the TV screen momentarily while the functions are being adjusted.

Press *MENU* until the second *VIDEO* Menu Appears

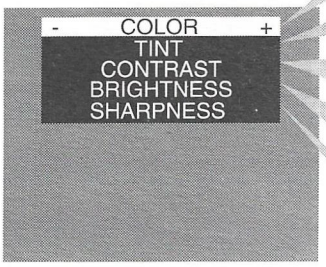

The *COLOR* function adjusts the amount of color in the picture. Press – or + to select *COLOR*, then press + to increase or press – to decrease color.

The *TINT* function adjusts the color of flesh tones. Press – or + to select *TINT*. Press + to add more green tint or press – to add more red tint.

The *CONTRAST* function adjusts the overall brightness and contrast of the picture. Press – or + to select *CONTRAST*. Press + to increase or press – to decrease contrast.

The *BRIGHTNESS* function adjusts the brightness of the dark portions of the picture. Press – or + to select *BRIGHTNESS*. Press + to increase or press – to decrease brightness.

The *SHARPNESS* function adjusts picture sharpness. Press – or + to select *SHARPNESS*. Press + to increase or press – to decrease.

Adjustment Displays

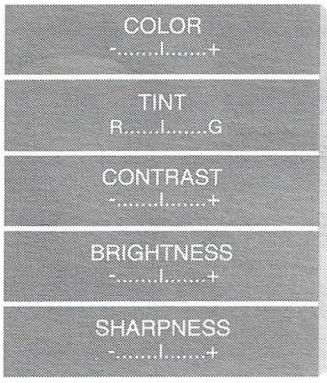

These functions are displayed individually at the bottom of the screen once they have been selected. The setting can be adjusted at that time by pressing either the – or + button.

Caution:
When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. These types of imprints are not covered by your warranty because they are the result of misuse.

SETUP Menu

Press the *MENU* button on the TV until *SETUP* is highlighted. Then press + to select the *SETUP* menu. Press *MENU* to move down the menu and + and – to adjust each function.

1st *SETUP* Menu Screen

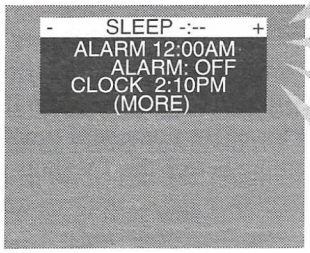

By setting the *SLEEP* function, you can program your TV to turn itself off after a certain period of time. This is useful whenever you want to watch TV for an hour or so before going to sleep. Press the – or + button to select the length of time you want the TV to stay on. *Details are on page 10.*

You can program your TV to turn itself on at a specific time by setting the *ALARM* time function and turning the *ALARM:ON/OFF* function *ON*. *Details are on page 11.*

The *ALARM:ON/OFF* function lets you activate and deactivate the alarm by pressing the – or + button. *Details are on page 11.*

After setting the *CLOCK* function, you will be able to see the on-screen time display whenever you change channels or press the *DISPLAY* button. Press and hold the – button to set the correct hours and the + button to set the correct minutes. *Details are on page 3.*

Press *MENU* until the second *SETUP* Menu Appears

When you press the – or + button to start the *AUTOPROGRAM* function, the TV automatically cycles through all channels and places only channels for your area in its channel memory. The channel memory is the list of channels the TV stops on when you press the *CHANNEL* up or down button. *Details are on page 12.*

The *EDIT CHANNELS* function allows you to edit the channel memory by adding or erasing channels. *Details are on page 12.*

The *ANTENNA:CABLE/AIR* function tells your TV whether you have cable or a home antenna connected to it. The TV automatically adjusts this function for you when you start the *AUTOPROGRAM* function. If you wish to adjust it manually, press the – or + button to switch between the *CABLE* and *AIR* setting.

The *LIST FEATURES* function activates your TV to automatically list a variety of its special features. When this display is selected, start this feature by pressing the + button. The feature list continues until it is stopped by pressing any button on the front of the TV.

Sleep Timer Operation

By setting the Sleep Timer, you can program your TV to turn itself off after a certain period of time (up to four hours). This is useful whenever you want to watch TV for an hour or so before going to sleep.

Setting the Sleep Timer

1. Press the *MENU* button on the TV until *SETUP* is highlighted. Then press + to select the *SETUP* menu.

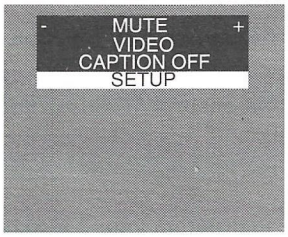

2. Press the + button to select the length of time you want the TV to stay on. Each press of the + button adds 30 minutes. Each press of the – button subtracts 30 minutes until the display reaches -:--.

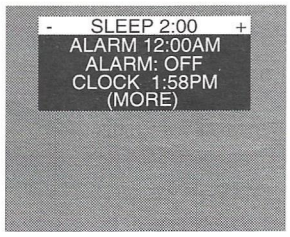

3. When finished, the display disappears from the screen in a few seconds.

4. When the Sleep Timer is activated, the letters *"SLP"* appear on the screen whenever you change channels or press the *DISPLAY* button.

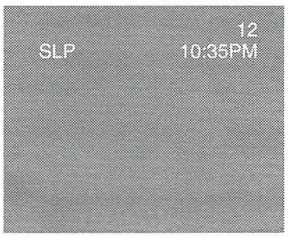

5. Enter the *SETUP* menu again if you want to see the amount of time remaining before the TV shuts itself off.

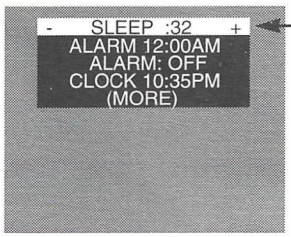

32 minutes remaining

6. When the Sleep Timer counts down to one minute, the Sleep Timer display appears on the screen . When this display appears, pressing the + button will add additional time if you wish the TV to remain on.

Cancelling Sleep Timer

Press the *MENU* button on the TV until *SETUP* is highlighted. Then press + to select the *SETUP* menu. Press the – button until the screen shows "-:- -".

Alarm Timer Operation

The TV can be programmed to turn itself on at a specific time within a 24-hour period by setting the Alarm Timer. This is useful for using the TV as an alarm clock. Instead of waking up to a buzz, wake up to a favorite TV program. You may also set the timer for a special program that you might otherwise forget.

Once you set the Alarm Timer, the TV will turn on at the preset time, stay on for one hour, and then shut off. When the Alarm Timer turns on the TV, it will turn on to the TV channel and volume level that was selected the last time it was on. You may need to adjust the channel and volume level before activating the Alarm Timer.

Setting the Alarm Timer

1. Press the *MENU* button on the TV until *SETUP* is highlighted. Then press + to select the *SETUP* menu.

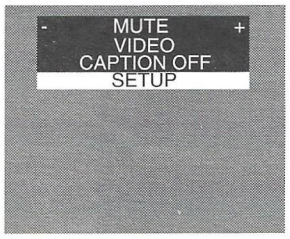

2. Press *MENU* until *ALARM* is highlighted. Press the – button to select the correct hour and press the + button to select the correct minutes.

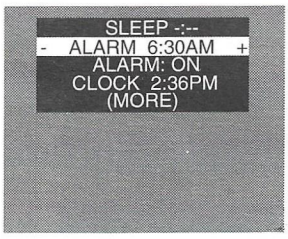

3. After you set the *ALARM* time function, press *MENU* to select the *ALARM:ON/OFF* function. Be sure to set this function to *ON* if you want the TV to turn on by itself at the alarm time you selected. Press – or + to switch this setting.

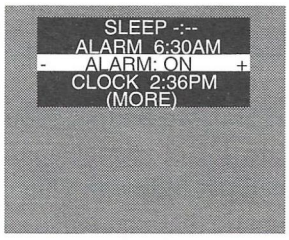

4. When the Alarm Timer is activated, the letters "*ALM*" appear on the screen whenever you change channels or press *DISPLAY*.

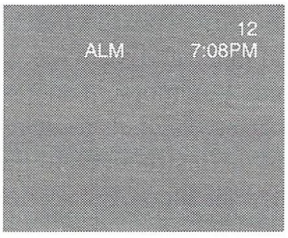

5. The TV turns on at the preset time and automatically sets the Sleep Timer to 1 hour (60 minutes). It operates for 60 minutes then shuts off.

6. To turn the TV off before the 60 minutes is up, just press the *POWER* button on the TV or the remote. If you wish to watch TV longer than 60 minutes, then cancel the Sleep Timer by setting it to "-:--". *Details are on page 10.*

Turning the Alarm On and Off

1. Press the *MENU* button on the TV until the *ALARM:ON/OFF* function is selected.

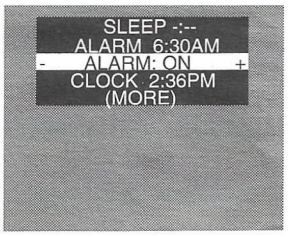

2. Press the – or + button to switch between *ON* and *OFF*.

AutoProgramming Channel Memory

The Channel Memory is the list of TV channel numbers your TV will stop on when you press the *CHANNEL* up or down button. You can program any list of channels into the channel memory although your TV is so automatic that you will probably never need to manually operate this feature. If you do, follow the instructions at the right.

The first time you turn on the TV, it will automatically cycle through all channels and place active channels into the channel memory. You can then add or erase channels as desired by following the instructions in the "Editing Channel Memory" section at the right.

Notes:

- Signals from scrambled cable channels and some cable channels having unusual signal conditions may not be autoprogrammed.
- To prevent the TV from losing its channel memory, make sure the outlet you plug your TV into is "on" all the time. Do not plug the TV into an outlet that can be turned on and off by a wall switch. Also do not plug the TV into an outlet on the back of another device (such as a cable-TV converter box) that is turned off when the device is turned off.
- If there is an extended power failure, your TV will automatically reprogram active channels the first time you turn it on after the power failure.

1. Connect home antenna(s) or cable to your set.
2. Press the *MENU* button on the TV until *SETUP* is highlighted. Press + to select the *SETUP* menu.

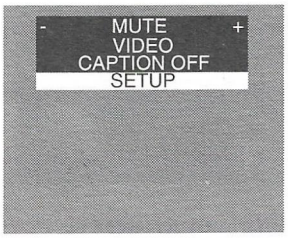

3. Repeatedly press the *MENU* button until *AUTOPROGRAM* is highlighted.

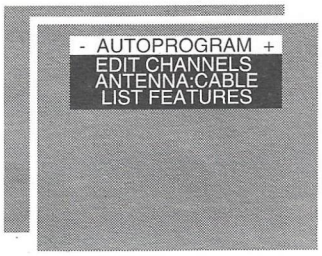

2nd *SETUP* Menu

4. Press + to begin AutoProgramming. The TV cycles through all channels and places active channels into memory.

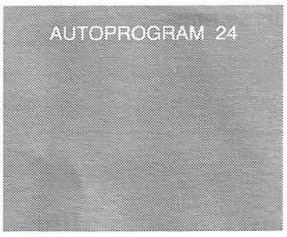

5. When the TV finishes cycling you can check the channels in memory by pressing the *CHANNEL* up or down button.

Editing Channel Memory

Follow these instructions to erase and add channels.

1. Press the *MENU* button on the TV until *SETUP* is highlighted. Press + to select the *SETUP* menu.

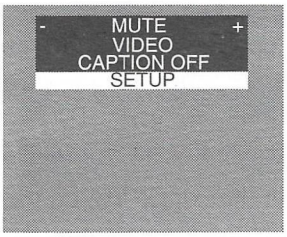

2. Repeatedly press the *MENU* button until *EDIT CHANNELS* is highlighted.

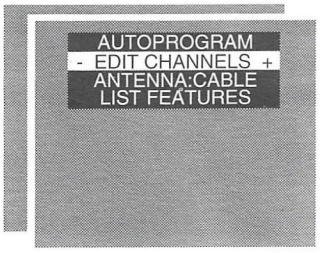

2nd *SETUP* Menu

3. Press + to select *EDIT CHANNELS*. Select the channel number by pressing *CHANNEL* up or down.

   If "+" appears next to the channel number, then the channel is in the channel memory list. To erase the channel, press –.

   If "–" appears next to the channel number, then the channel is not in the channel memory list. Press + to add the channel.

4. Press the – button to erase or press the + button to add.

Connecting Your TV

Antenna/Cable Information

Most modern TV antennas receive both VHF (*Very High Frequency*) and UHF (*Ultra High Frequency*) channels. Channels 2-13 are VHF channels, and channels 14-69 are UHF channels.

Typical Indoor Antenna

Typical Outdoor Antenna

In most situations you will get better picture quality if you use an outdoor antenna or connect your TV to a cable-TV system. If this is not possible, connect the indoor antenna supplied with your TV.

Cable-TV delivers both VHF and UHF channels and other channels not available from your antenna.

Shown below are two basic types of antenna cables. Signals from a home antenna may be conducted through either type. Cable-TV signals, however, are always conducted through round, 75-ohm coaxial cable.

Types of Antenna Cables

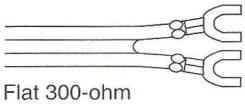

Flat 300-ohm twin-lead cable

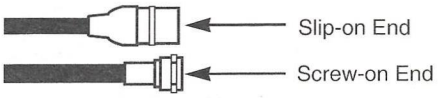

Round 75-ohm coaxial cable

Use the connector shown below to connect your antenna or cable-TV system to the back of the TV.

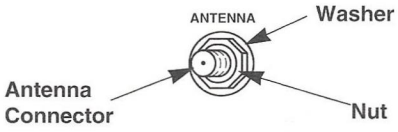

IMPORTANT NOTE: Antenna connector, nut, and washer must be in place when TV is in use.

- Follow the instructions below if you intend to connect the indoor antenna supplied with your TV.

-or-

- Follow the instructions on *page 14* if you intend to connect an indoor or outdoor antenna to your TV.

-or-

- Follow the instructions on *page 15* if you intend to connect a cable- TV system to your TV.

Connecting Antenna Supplied with TV

Follow these steps to connect the *indoor* antenna supplied with your TV (only if you do not connect an outdoor antenna or a cable-TV system).

Dipole Antenna (supplied)

1. Insert the antenna base into the pocketed slot on the back of your set. Stand at the back of your set with the antenna twin-lead facing you, and press the base of the antenna into the slot until it locks in place.
2. Connect the ends of the twin-lead to the Antenna Adapter (supplied).
3. Connect the Antenna Adapter to the *ANTENNA* connector on the back of the TV.
4. Later, after you've turned on the TV, adjust the length and position of the antenna rods for best reception.
   - For viewing VHF channels, extend the rods fully.
   - For viewing UHF channels, shorten the rods for best reception.

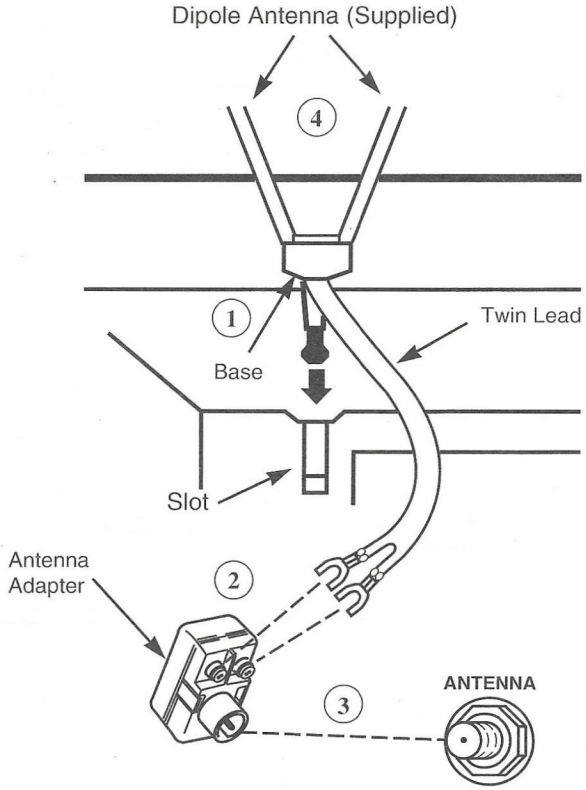

Connecting Your TV

Home Antenna Connections

Follow one of the steps below to connect an indoor or outdoor antenna to your TV (not a cable-TV system).

A If the antenna cable coming from your home antenna is a 75-ohm round coaxial cable that carries only VHF (channels 2-13), only UHF (channels 14-69), or VHF and UHF channels, connect it to your set like this:

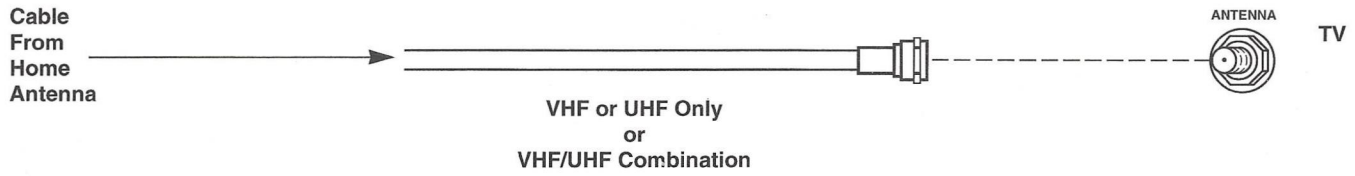

–OR–

B If the antenna cable coming from your home antenna is a 300-ohm flat twin lead that carries only VHF (channels 2-13), only UHF (channels 14-69), or VHF and UHF channels, connect it to your set like this:

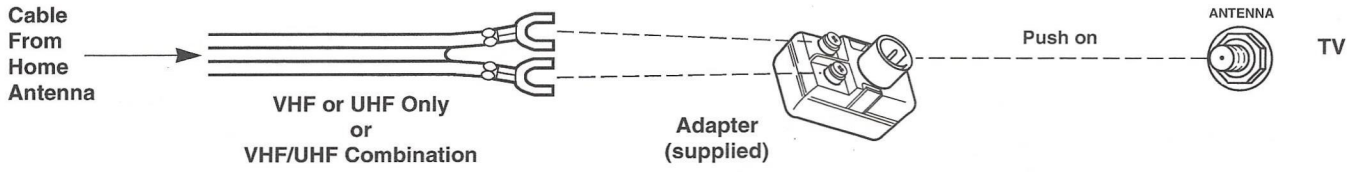

–OR–

C If the antenna cables coming from your home antenna(s) are a 75-ohm round coaxial cable that carries VHF (channels 2-13) and a 300-ohm flat twin-lead cable for UHF (channels 14-69), connect them to your set like this:

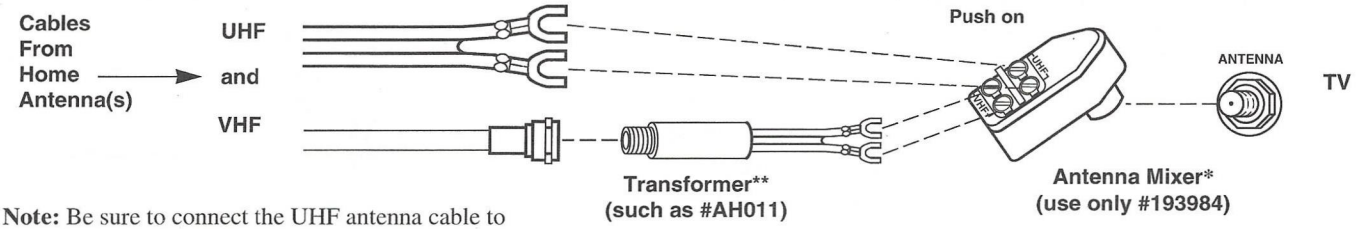

Note: Be sure to connect the UHF antenna cable to the UHF screws on the Antenna Mixer and the VHF antenna cable to the screws marked VHF.

–OR–

D If the antenna wires coming from your home antenna(s) are two 300-ohm flat twin-lead cables as shown here, connect them to your set like this:

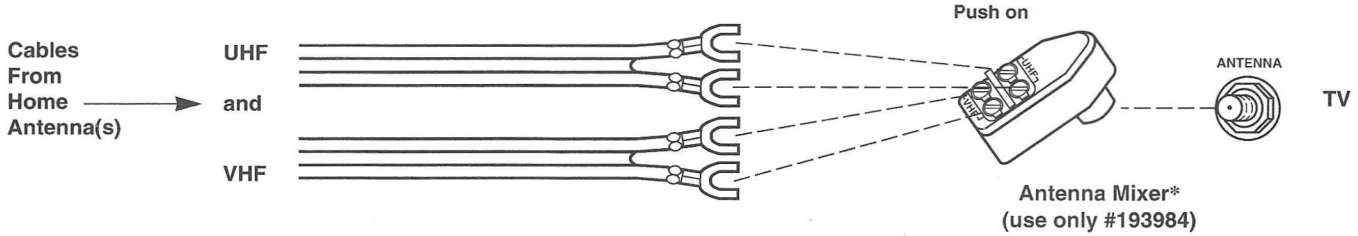

Note: Be sure to connect the UHF antenna cable to the UHF screws on the Antenna Mixer and the VHF antenna cable to the screws marked VHF.

* Optional accessory available from your dealer. Only use Antenna Mixer (Stock #193984).

Connecting Your TV

Cable-TV Connections

Follow one of these steps to connect a cable-TV system to your TV instead of a home antenna. Since cable-TV systems vary, you may wish to consult your local cable-TV company for additional information.

A Follow this diagram if your cable company does not require a cable box (no scrambled channels):

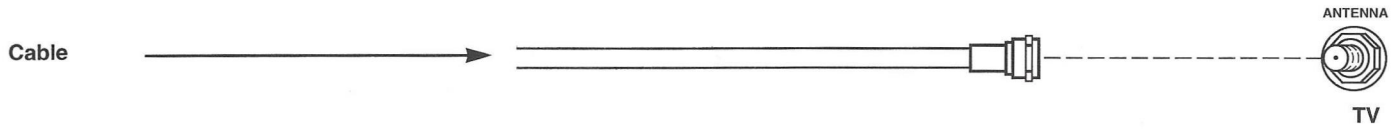

B Follow this diagram if your cable company requires a cable box that can be controlled by remote control:

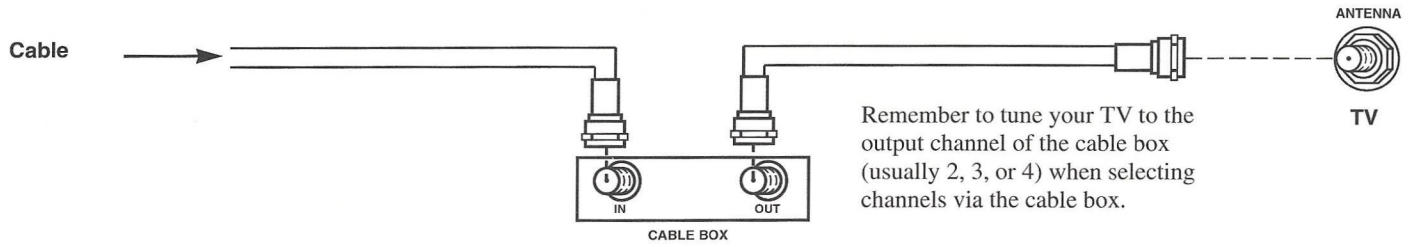

Remember to tune your TV to the output channel of the cable box (usually 2, 3, or 4) when selecting channels via the cable box.

C Follow this diagram if your cable company requires a cable box that cannot be controlled by remote control:

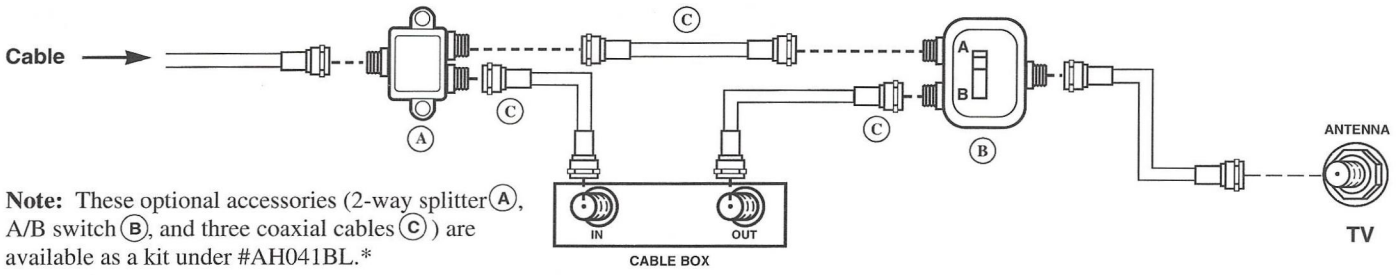

Note: These optional accessories (2-way splitter Ⓐ, A/B switch Ⓑ, and three coaxial cables Ⓒ) are available as a kit under #AH041BL.*

The "A" position on the A/B switch lets you select all non-scrambled channels by the TV's remote.

The "B" position allows you to select scrambled channels via the cable box. Remember to tune your TV to the output channel of the cable box (usually 2, 3, or 4) when selecting channels via the cable box.

* Optional accessories are available from most dealers or electronics supply stores.

Connecting Your TV

Cable-TV Operation

Your new TV is designed to receive up to 181 TV channels, including 125 non-scrambled cable channels (see chart below). To use this TV on a cable-TV system, confirm that the cable-TV system is properly connected to your TV. Since cable systems vary, you may wish to consult your local cable-TV company for additional information.

If your cable-TV company follows EIA/NCTA channel-identification standards, most of the channels offered by your cable company will be identified by channel numbers that are identical to those on your TV. For example, if your cable-TV system has programs on cable channel 20, you can choose this channel by selecting channel 20 on your TV.

Some cable-TV companies do not follow the EIA/NCTA standards and instead assign their own channel identification. For example, some use the standard broadcast channel numbers (2-13) for channels 2-13, but identify their other channels with letters. If your cable company does not follow the EIA/NCTA standards, ask them for a cross reference that shows to which channels you should tune your TV to receive their cable-TV channels.

Scrambled Cable-TV Channels
Some cable companies offer "premium-pay" channels in which the signal is scrambled. Descrambling these signals for normal viewing requires the use of a cable box which is generally provided by the cable company.

How you connect the cable box to your TV depends upon whether or not the cable box can be controlled by remote control. If your cable box is remote controllable, you will want to connect it as shown in Diagram B on the previous page.

If your cable box cannot be controlled by remote control, you will still be able to remotely control "unscrambled" channels with the connection shown in Diagram C on the previous page.

The chart below lists the "total" channel and cable count.

Channels	Off Air	Cable
• Low VHF A-8 (Channel 01)	—	1
• VHF (Channels 2-13)*	12 *	12 *
• UHF (Channels 14-69)	56	—
• Low Midband A-5, A-1 (Channels 95-99)**	—	5**
• Midband (Channels 14-22 or A-I)	—	9
• Superband (Channels 23-36 or J-W)	—	14
• Hyperband (Channels 37-64 or W+1 to W+28)	—	28
• Ultraband (Channels 65-94 and 100-125 or W+29 to W+84)	—	56
Total*	68	125

* VHF is only counted once in total channel count because you can receive channels 2-13 on both "off-air" and "cable" channels. Therefore the total channel count for "off-air" and "cable" is 181 channels (68+125-12=181).

** Channels 95, 96, and 97 are not applicable in Canada. Therefore, the total number in Canada is 178.

Accessories

Screw-on Antenna Cable
Attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. The ends screw onto the connectors for a secure connection.

AH037 (3-ft)

Push-on Antenna Cable
Attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. Ends push on for a quick connection.

Gold-Tipped Cables
AH065G (6-ft)
AH066G (10-ft)

Cleaner/Polisher (AH035)
Non-abrasive formula cleans and polishes TV screens and non-absorbent surfaces on all types of audio and video equipment. Ideal for plastic, glass, mirror, and chromed surfaces.

AH035

Remote Control (CRK64C)
This is the remote that came packed with your TV. You can use the order form to order it direct by mail if desired.

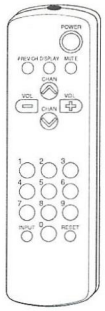

211690

Dipole Antenna
Designed to attach to the back of your TV. Can be used for both VHF and UHF channels.

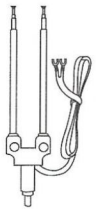

ANT100

Note: All specifications and descriptions of accessories are subject to change without notice.

Accessory Order Form
Book No. 1Q56 373-01A

Description	Part No.	Price	Qty	Total
Transformer	AH011	$ 1.90		
Cleaner/Polisher	AH035	$ 6.95		
Screw-on Antenna Cable (3-ft)	AH037	$ 3.95		
A-B Switch	AH041	$14.95		
Cable Connection Kit	AH041BL	$19.95		
Gold-Tipped Antenna Cable (6-ft)	AH065G	$ 6.99		
Gold-Tipped Antenna Cable (10-ft)	AH066G	$ 8.99		
Dipole Antenna	ANT100	$ 9.95		
Replacement Remote Control (CRK64C)	211690	$59.95		
Replacement Power Cord	192492	$12.20		
Antenna Adapter	193983	$ 9.80		
Antenna Mixer	193984	$10.73		

Prices are subject to change without notice.

Total Merchandise ($10 Minimum Order) ..... $_____

Sales Tax ..... $_____

We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.

Shipping, Handling, and Insurance ..... $ 5.00

Total Amount Enclosed ..... $_____

Use VISA or MasterCard preferably. Money order or check must be in U.S. currency only. No COD or CASH.

Detach Here

All accessories are subject to availability.
Where applicable, we will ship a superseding model.

Please complete other side also

Accessories

Charge your order on your VISA or MasterCard by filling in below

USE YOUR CREDIT CARD

IMPORTANT: Copy complete account number from your VISA card

☐☐☐☐ ☐☐☐☐ ☐☐☐☐ ☐☐☐☐

My card expires: ☐☐ ☐☐

IMPORTANT: Copy complete account number from your MasterCard

☐☐☐☐ ☐☐☐☐ ☐☐☐☐ ☐☐☐☐

Copy Number above your name on MasterCard ☐☐☐☐ My card expires: ☐☐ ☐☐

AUTHORIZED SIGNATURE

Prices are subject to change without notice.

PLEASE

Print or type your name and address clearly. This will be your mailing label.

A complete and correct order will save you days of waiting.

Name: _____

Street: _____

_____ Apt: _____

City: _____

State: _____ Zip: _____

Detach Here

Please make sure that both sides of this form have been filled out completely.

United States Orders

To place your order by phone, have your Visa or MasterCard ready and call the toll-free number listed below between 8AM and 8PM Eastern Standard Time. **Use this number only to place an order for accessory items listed on this order form.**

1 – 800 – 338 – 0376

Most time your order will be shipped UPS within 72 hours of receipt. If ever it is not possible to ship within 30 days, we will notify you with an update on your order and an option to cancel.

To place your order by mail, detach and mail the completed order form with credit card information, money order, or check in U.S. currency (made payable to Thomson Consumer Electronics) to the following address:

Video Accessories
P.O. Box 8419
Ronks, PA 17573

For more information on these accessories (or current prices), write to the following address:

Video Accessories Customer Service
Thomson Consumer Electronics
Distributor & Special Products
2000 Clements Bridge Rd
Deptford, NJ 08096-2088

Canadian Orders

For Canada inquiries, please call one of these toll-free numbers for information about accessories:

English: 1 – 800 – 668 – 5518
French: 1 – 800 – 668 – 5507

International Orders

This offer is valid only in the 50 United States. For international orders, please send your request for quotation (not an order) to:

International Customer Service
Thomson Consumer Electronics
Distributor & Special Products
2000 Clements Bridge Rd
Deptford, NJ 08096-2088 USA

Caring for Your TV

Cleaning and Care

Dust TV as required, using a soft cloth or the dusting attachment of your vacuum cleaner. Occasionally vacuum the ventilation slots in the cabinet to help assure adequate ventilation. Take care not to scratch the plastic surfaces.

If your TV's cabinet has a textured finish, do not use furniture polish. Because textured finishes are porous, using furniture polish will mar their appearance. They can be easily cleaned with a damp, soft cloth.

To clean the screen, you can wipe it with a damp, soft cloth. Then dry it with a soft cloth. (A mild soap may be used on the screen if it is extremely dirty.) Be sure to turn off the TV before cleaning the screen, and do not allow liquid to run down the screen and inside the TV.

A special antistatic cleaning and polishing solution (AH035) is available for use on most TV screens and non-textured cabinets. This non-abrasive formula imparts brilliance, repels static, and resists fingerprints. Lint-free polishing cloths are included.

AH035

Do not use strong cleaners, polishes, or chemically-treated cloths to clean the screen or cabinet.

Avoid placing drinks or vases with water on top of your TV.

To prevent fire or shock hazard, do not expose this TV to rain or moisture.

Trouble checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again. *For warranty information see the next page.*

TV Trouble	Checks and Adjustments
TV will not turn on	• Check to make sure it is plugged in. • Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else. • Maybe batteries in remote are "dead". Try using *POWER* button on TV. • Maybe remote control was not aimed at remote sensor.
Controls don't work	• Try unplugging set for 15 minutes and then turning it on again.
Intermittent or no remote	• Maybe something was between the remote and the remote sensor. • Maybe batteries in remote are weak or dead. Try replacing batteries. • Maybe batteries were installed incorrectly. Try replacing batteries correctly.
Turns off while playing	• Sleep Timer function may have been activated. • If TV turned on because of alarm, it will automatically turn off after one hour. • Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again.
Turns on unexpectedly	• Alarm function may have been set.
Blank screen	• Try another channel.
No sound, picture okay	• Maybe sound is muted. Try pressing *VOLUME* up button to restore sound.
Can't select certain channel	• Channel may not be in channel memory. Try AutoProgramming. • If using VCR, check to make sure *TV/VCR* switch on VCR is in correct position.
No picture, no sound	• If watching VCR connected through antenna input, make sure TV is tuned to channel 3 or 4–same as *CH3/CH4* switch on VCR. Also check to make sure *TV/VCR* switch on VCR is in correct position.
Sound okay, picture poor	• Check antenna connections. • Try adjusting *SHARPNESS* function to improve weak signals.
Picture okay, sound poor	• Try another channel.
Improper color in one or more areas of the picture	• Try unplugging set for a minimum of 15 minutes and then turning it on again. For best results you should place the set in the position you will be watching it before you plug it back in.
Closed Captioning does not appear	• Closed captioning will only appear on the screen if the program material has the closed captioning signal with it and closed caption is turned on to C1 or C2.

Limited Warranty

What your warranty covers:
- Any defect in material or workmanship.

For how long after your purchase:
- 90 days for labor charges.
- One year for parts.
- Two years for picture tube.

The warranty period for rental units begins with the first rental.

What we will do:
- Pay any Authorized GE Television Servicenter the labor charges to repair your television.
- Pay any Authorized GE Television Servicenter for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.

How you get service:
- For screen sizes of 20" and smaller:
  Take your GE television to any Authorized GE Television Servicenter.
- For screen sizes larger than 20":
  Request in-home service from any Authorized GE Television Servicenter.
- To identify your nearest Authorized GE Television Servicenter, ask your Dealer, look in the Yellow Pages, or call 1-800-447-1700.
- Show the service technician your evidence of purchase date.

What your warranty does not cover:

Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your Dealer.)
Installation and related adjustments.
Signal reception problems not caused by your television.
Damage from misuse or neglect.
Remote control batteries.
A television that has been modified or incorporated into other products or used for institutional or other commercial purposes.
A television purchased or serviced outside the USA.

Product Registration:
- Please complete and mail the *Product Registration Card* packed with your TV. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:
- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

If you purchased your television in Canada:
- The Canadian Warranty applies in place of this Warranty.

If your TV needs service, please contact your dealer or the nearest servicenter. Please do not send any products to the Indianapolis address listed below or on the box. This only adds delays for service of your TV. *See how to get service on page 21.*

Thomson Consumer Electronics
600 North Sherman Drive
P.O. Box 1976
Indianapolis, IN 46206-1976

©1992 Thomson Consumer Electronics, Inc.
Trademarks(s)® Registered
Marca(s) Registrada(s)
Part Number 1Q56 373-01A
TOCOM Number 20033850

V2U01-02

GE PRODUCT REGISTRATION DEPARTMENT
THOMSON CONSUMER ELECTRONICS
PO BOX 173144
DENVER CO 80217-3144

URGENT
PROCESS
IMMEDIATELY!

Product Registration Department

FIRST
CLASS
POSTAGE
REQUIRED

Product Registration Card

ENSURE YOUR:

- ☑ WARRANTY CONFIRMATION
- ☑ OWNER VERIFICATION
- ☑ MODEL REGISTRATION

IMPORTANT
Return
within
10 Days

Protect Your Investment

Congratulations on choosing a GE product. It's an intelligent decision that's sure to reward you for many years to come.

To receive all the privileges your purchase entitles you to, please be sure to complete and mail your Product Registration Card to us at once.

Return the attached card within 10 days to ensure:

☑ Warranty Confirmation.

Your prompt registration confirms your right to the protection under the terms and conditions of our warranty.

☑ Owner Verification.

Your completed Product Registration Card serves as verification of your ownership in the event of product loss or theft.

☑ Model Registration.

Returning the attached card provides a permanent record of your model number and ensures you'll receive all of the information and benefits due to owners of your model.

Your name will not be added to other mailing lists.

DETACH AND MAIL THIS PORTION TODAY

Product Registration Card

URGENT
RESPOND WITHIN 10 DAYS!

MODEL NUMBER:

SERIAL NUMBER:

MODEL/MODÈLE	SERIAL NO./Nº de SÉRIE
13GP239	307475588

Enter your product model and serial numbers if not pre-printed above.

Date of Purchase — Month | Day | Year

V2U01-02

First Name | Initial | Last Name

Street | Apt. No.

City | State or Province | ZIP or Postal Code

1Q56 400-01A